

N16 P2 No Relay Output Harness Design

Last Changed: 02/04/2026



Products that can use this harness

EZ42B Nebula Cam Controller

Note:

Power must be supplied from the ECU relay that feeds the injectors. If not available, use the relay that feeds the coils. This supply must be taken from pin 87, which switches off with the ECU.

If no relay is available, install the N15_P2 Relay Output Harness.

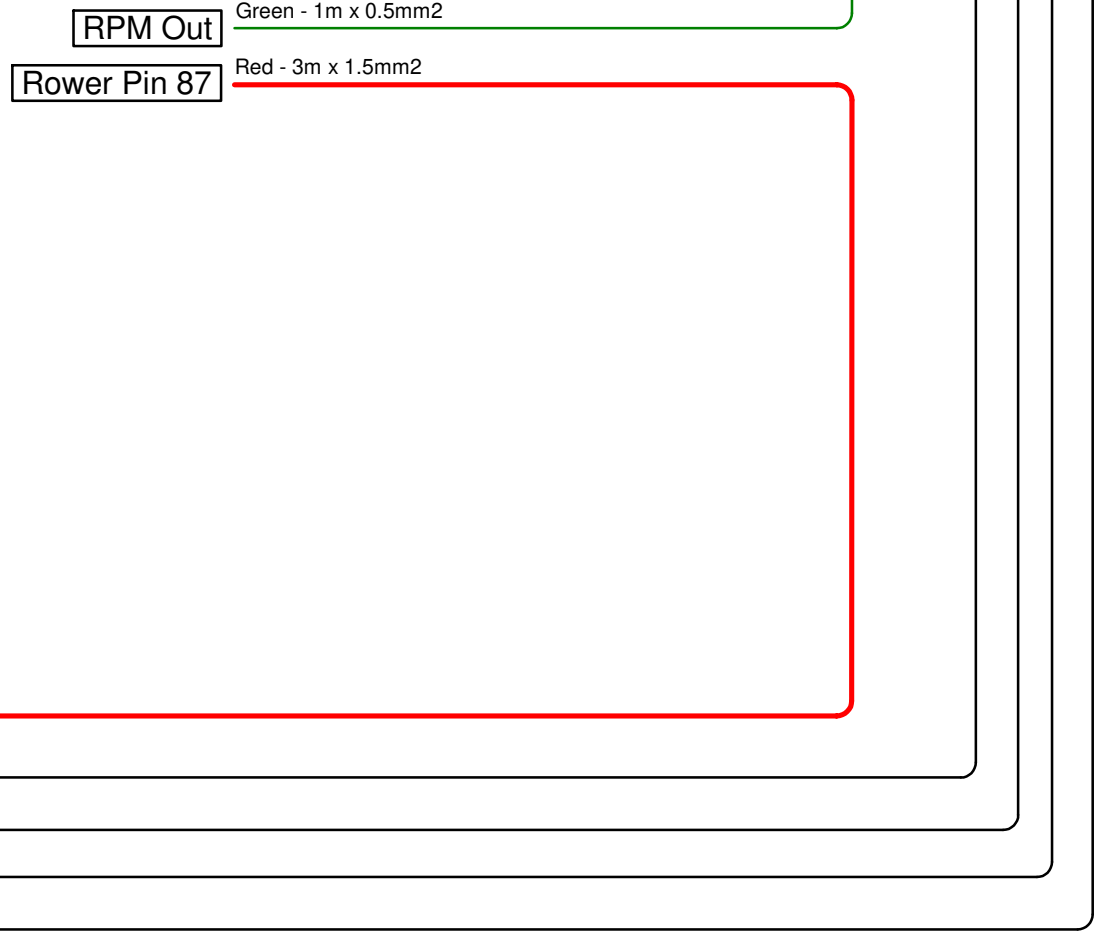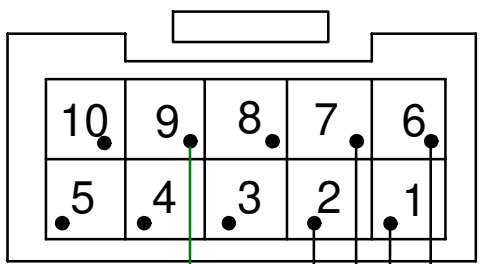

Cams +

Red - 3m x 1.5mm2

Ex2

Black / Orange - 2m x 0.5mm2

In2

Black / Brown - 2m x 0.5mm2

Ex1

Black / Purple - 2m x 0.5mm2

In1

Black / Red - 2m x 0.5mm2

450mm x 8mm

RPM Out

Green - 1m x 0.5mm2

Rower Pin 87

Red - 3m x 1.5mm2