

Neptune Jumper Settings

File Name: Neptune

Last Changed: 28/01/2015



SPITRONICS™

ENGINE MANAGEMENT SYSTEMS

WWW.SPITRONICS.COM

Ign+

Ignition Power



Earth

**Terminal Connections
with the same name
are tied together**

Led's Functions



Yellow - Power

Green1 - RPM Pulse

Green2 - Speed Pulse

Red1 - Reverse LED

 
Red2 - Profile LED

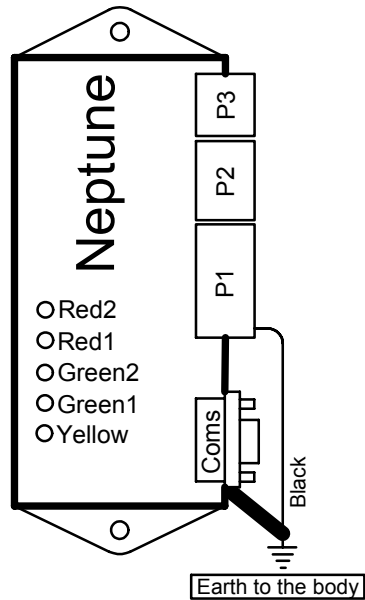

Harness Pin View

1. Red - Down Shift Button
2. Yellow - TPS Signal 0V to 5V
3. Yellow - Profile Switch
4. NC
5. Red - Speed Sensor +
6. Yellow - RPM Sensor +
7. Blue - Up Shift Button
8. Red - Reverse / Shifter
9. Blue - +5V Out
10. Orange - +12V Supply In
11. Blue - Speed Sensor
12. Green - RPM Input

 
Connector Pinouts



Harness Pin View

1. Red / White - Gearbox
2. Red / Orange - Gearbox
3. Red / Blue - Gearbox
4. Blue / Red - Gearbox
5. Blue - Mode LED +
6. Red / Yellow - Gearbox
7. Red / Green - Gearbox
8. Red / Black - Gearbox
9. Brown - +12V Relay Supply
10. Red - Lock-Up LED +

Connector Pinouts

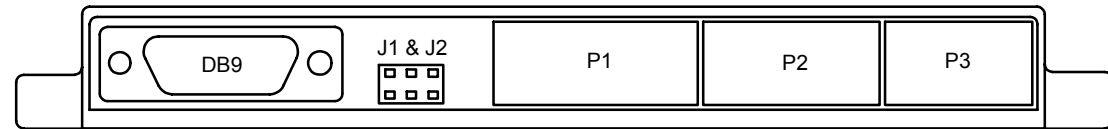

Jumper Settings

Speed Sensor Hall



Speed Sensor Magnetic



RPM Sensor Hall



RPM Sensor Magnetic

