



RPM Sensor Wiring OT02-P1


Last Changed: 08/08/2020
Harness: OT02-P1

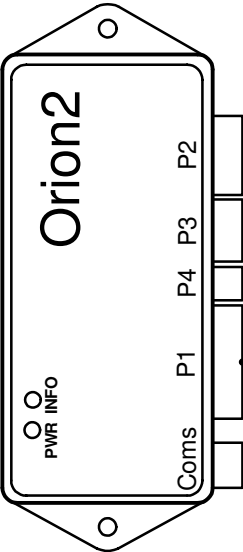


Magnetic RPM Sensor

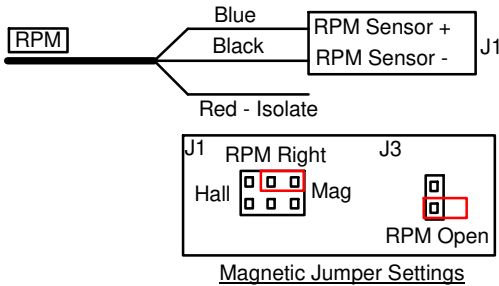

Hall or Optic RPM Sensor

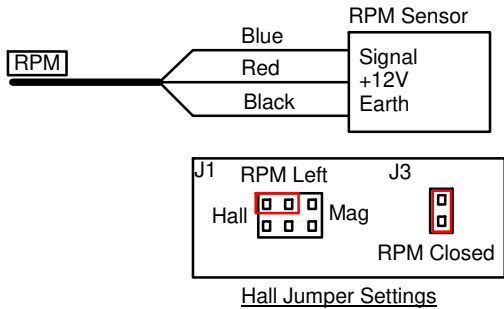


Magnetic RPM Sensor Tap-In and filter

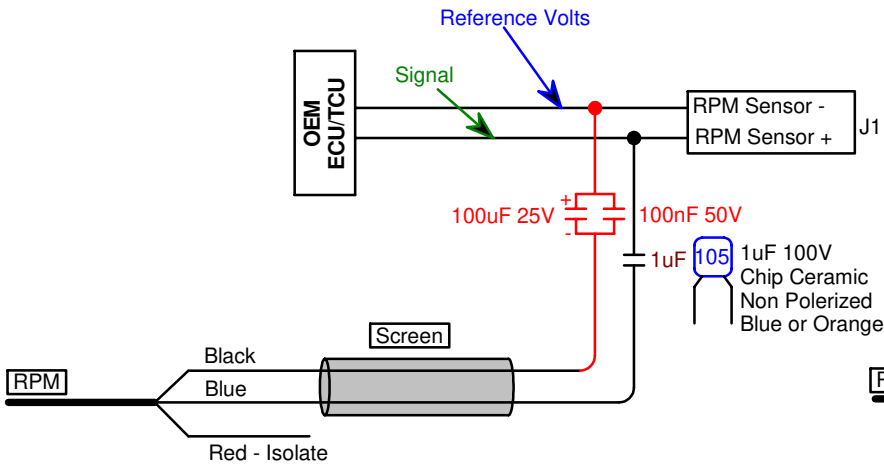


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

Hall or Optic or Tacho RPM Sensor Tap-In and filter

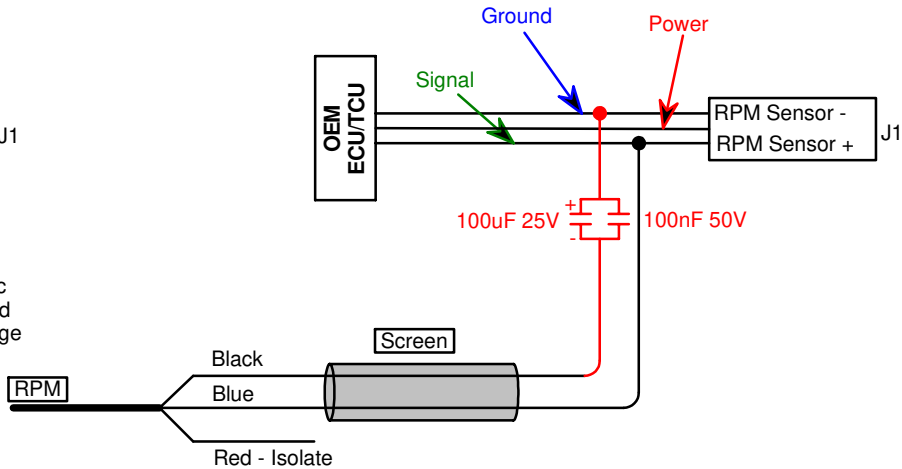

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences. If not used, leave the black un-connected and isolate.

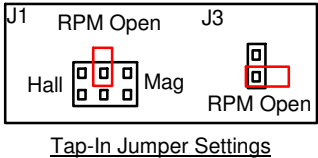

Software Settings

Active Sensors

- ☒ RPM
- ☒ Speed

See Manual for Jumper Location on the PCB