

8Cyl Split Seq 4 High Injector TBI




Last Changed: 22/10/2025

Harness Required: M63-P3

A	B	C	D	A	B	C	D

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injector placing on the throttle body is determined by the suction of the first 4 cylinders. See where each cylinder is situated on the engine then trace the intake runner to which of the 4 throtsles it is connected. Then connect the corresponding colour wire. The injection should always rotate from side to side. Never front to back. See the illustration below.

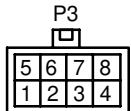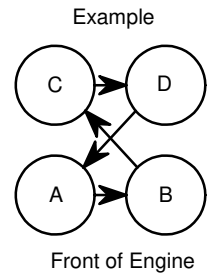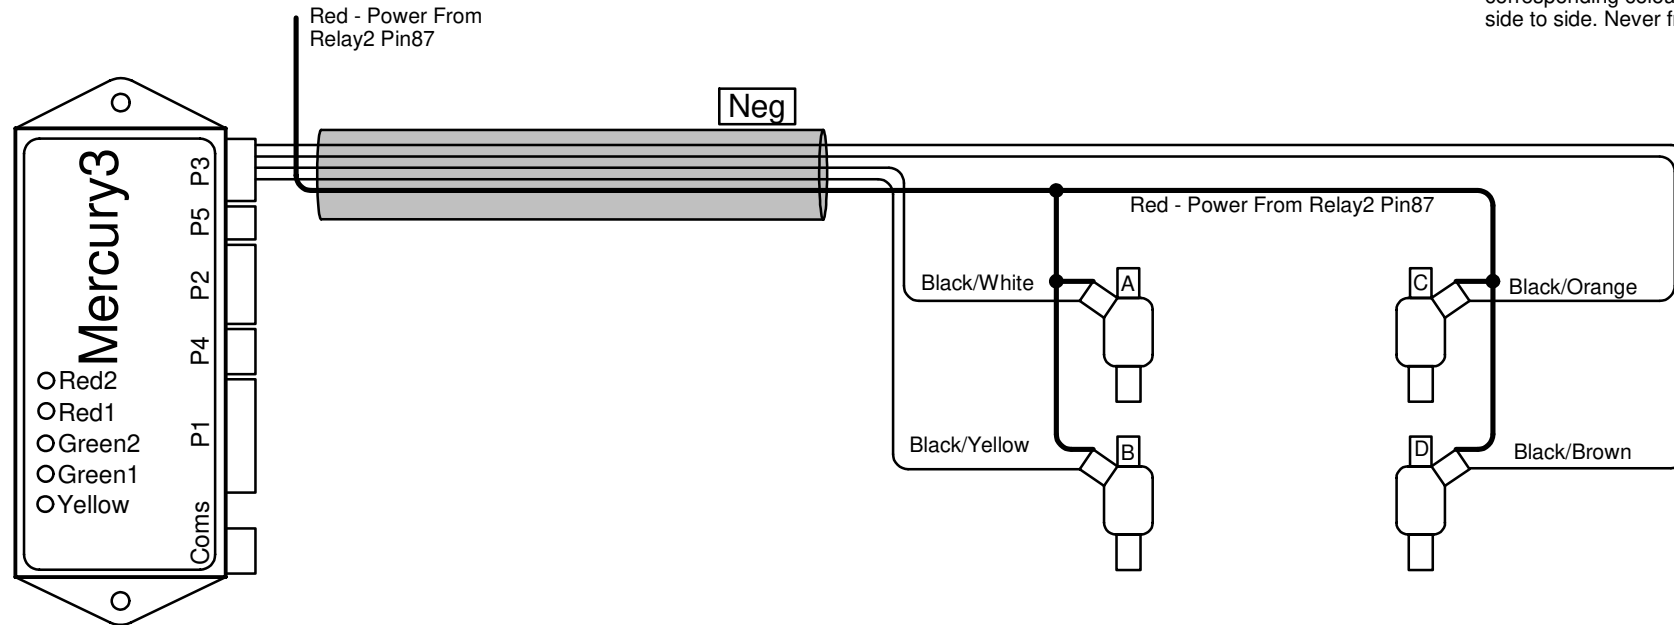

Harness Pin View

- 1. Black/Purple -
- 2. Black/Orange - Inj Drv 3
- 3. Black/White - Inj Drv 1
- 4. Blue/Orange -
- 5. Black/Red -
- 6. Black/Brown - Inj Drv 4
- 7. Black/Yellow - Inj Drv 2
- 8. Green -

Connector Pinouts

Software Settings

Injection Type

Split Sequential

Micro Fueling Type

Off