


4Cyl Full Seq Low Imp Injector Option2


Last Changed: 08/08/2020
 Harness Required: E33



Note! This connections is used with Smart Coils

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration.

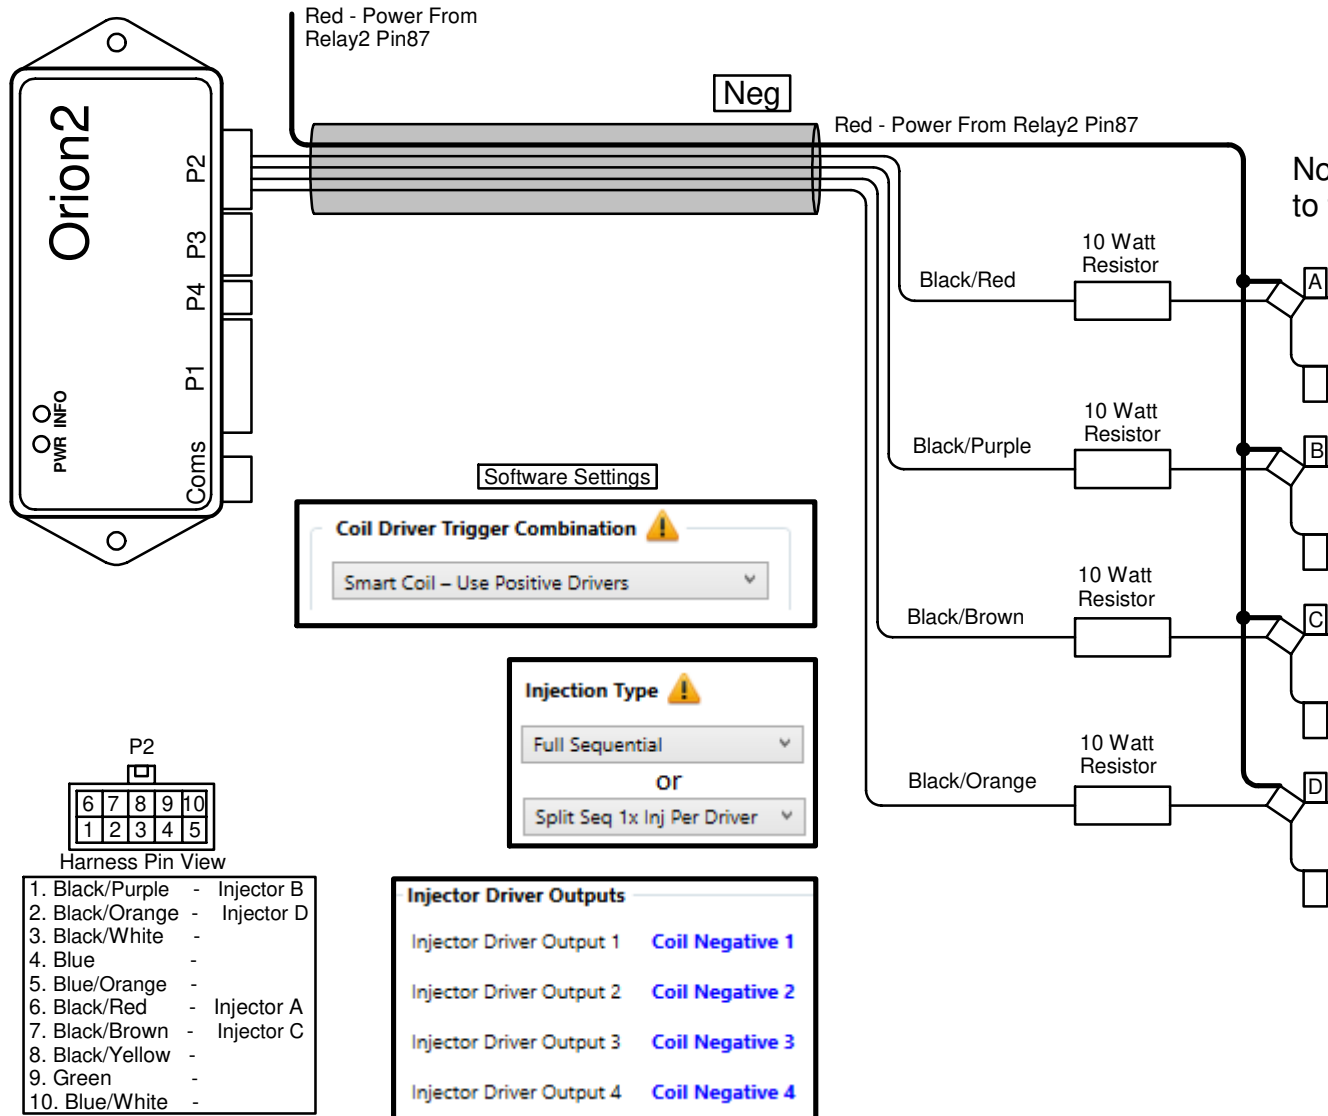

Note! The 10 Watt resistor must be close to the same value resistance as the injector

Software Settings

Coil Driver Trigger Combination ⚠

Smart Coil – Use Positive Drivers

Injection Type ⚠

Full Sequential

OR

Split Seq 1x Inj Per Driver


Injector Driver Outputs

Injector Driver Output 1 **Coil Negative 1**

Injector Driver Output 2 **Coil Negative 2**

Injector Driver Output 3 **Coil Negative 3**

Injector Driver Output 4 **Coil Negative 4**

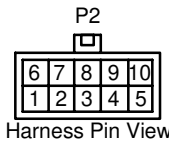

- Harness Pinouts
- 1. Black/Purple - Injector B
 - 2. Black/Orange - Injector D
 - 3. Black/White -
 - 4. Blue -
 - 5. Blue/Orange -
 - 6. Black/Red - Injector A
 - 7. Black/Brown - Injector C
 - 8. Black/Yellow -
 - 9. Green -
 - 10. Blue/White -

Connector Pinouts