

6Cyl Split Seq High Imp Injector Option1

Last Changed: 26/10/2020
Harness Required: E33

A

B

C

D


E

F

Note! This connections is used with Basic Coils

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two injectors in three pairs will have the same colour wire because they are pulsed together. Connect them as such. Do the same procedure for straight six engines.

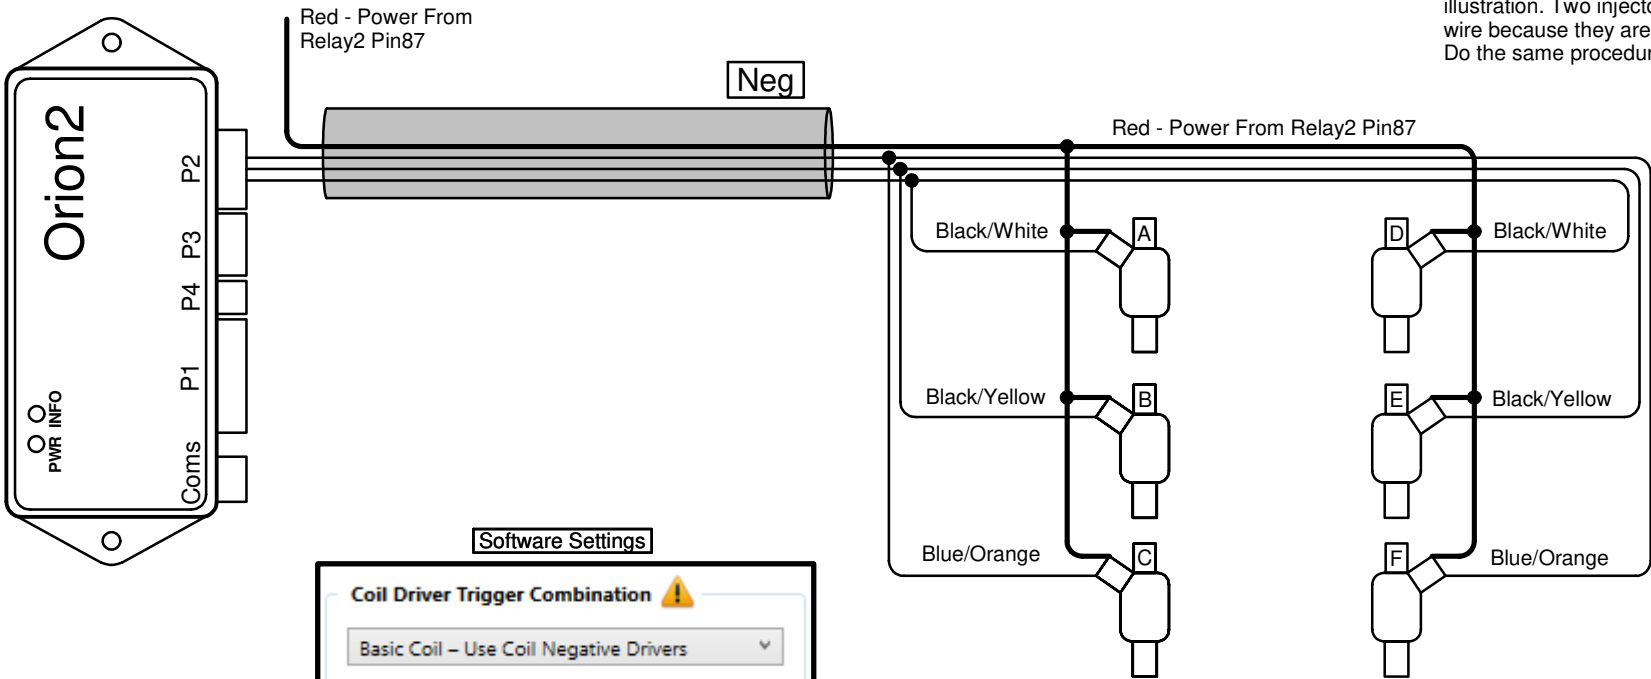

Software Settings


Coil Driver Trigger Combination ⚠
Basic Coil – Use Coil Negative Drivers

Injection Type ⚠

Split Seq 2x Inj Per Driver

Injector Driver Outputs

Injector Driver Output 1 Negative 1
Injector Driver Output 2 Negative 2
Injector Driver Output 3 Negative 5



Harness Pin View

- 1. Black/Purple -
- 2. Black/Orange -
- 3. Black/White - Injector A D
- 4. Blue -
- 5. Blue/Orange - Injector C F
- 6. Black/Red -
- 7. Black/Brown -
- 8. Black/Yellow - Injector B E
- 9. Green -
- 10. Blue/White -

Connector Pinouts