


# 8Cyl Split Seq High Imp Injector Option2


Last Changed: 08/08/2020  
 Harness Required: E33



Note! This connections is used with Smart Coils

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

**Note:** The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two injectors in four pairs will have the same colour wire because they are pulsed together. Connect them as such.

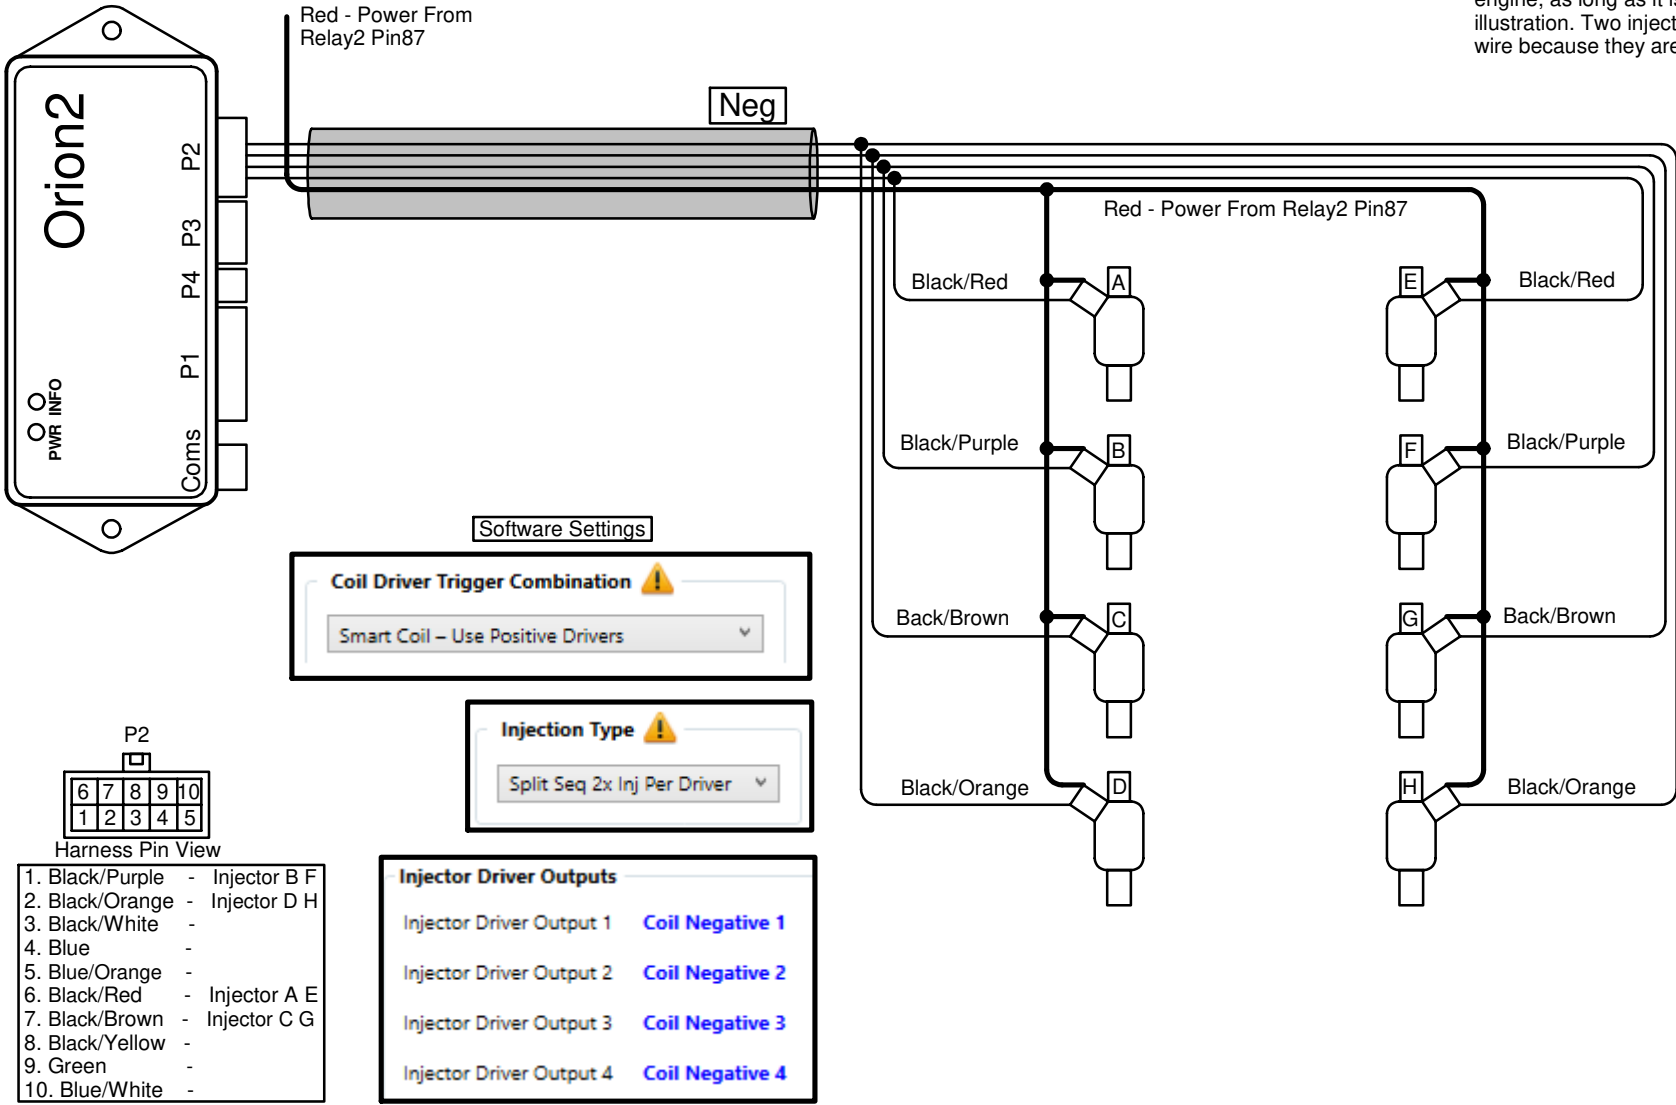

Software Settings

**Coil Driver Trigger Combination** ⚠️

Smart Coil – Use Positive Drivers

**Injection Type** ⚠️

Split Seq 2x Inj Per Driver

Harness Pin View

6	7	8	9	10
1	2	3	4	5

- 1. Black/Purple - Injector B F
- 2. Black/Orange - Injector D H
- 3. Black/White -
- 4. Blue -
- 5. Blue/Orange -
- 6. Black/Red - Injector A E
- 7. Black/Brown - Injector C G
- 8. Black/Yellow -
- 9. Green -
- 10. Blue/White -

**Injector Driver Outputs**

- Injector Driver Output 1 **Coil Negative 1**
- Injector Driver Output 2 **Coil Negative 2**
- Injector Driver Output 3 **Coil Negative 3**
- Injector Driver Output 4 **Coil Negative 4**

Connector Pinouts